

ご購入いただいたお客様へのお願い
Request to customers who have purchased.

このたびは「ポケモン ポケなで モンスターボール」をご購入いただき誠にありがとうございます。
本商品をより良く遊んでいただくために、遊ぶ前に下記のような操作をお願いいたします。
Thank you for purchasing "Pokémon Friends Poké Ball". To ensure you get the most out of this, please follow the steps below before playing.

はじめて遊ぶ前に：Before playing for the first time:

電池を入れ、「タイトル画面」が表示されたら必ずリセットボタンを押してください。
Please insert the batteries and when the "Title screen" appears, be sure to press Reset button.




リセットボタンを押した後、決定ボタンを長押しすると電源がオンになります。
After pressing Reset button, press and hold Confirm button to turn the power on.

こんなときは… Troubleshooting

- 電源をオンにするたびに毎回「時計リセット画面」が表示されてしまう。

Every time you turn on the power, "Clock reset screen" appears.

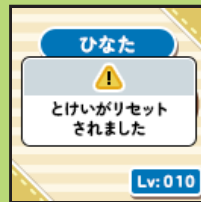

- メニューの「せってい」から「データしょうきょ」を行い、電池をいれたまま再度最初から遊んでください。

- Please go to "Settings" in the menu and select "Delete Save Data", then start playing again from the beginning with the battery inserted.

※「データしょうきょ」の方法は WEB 遊び方説明書の 19 ページを確認してください。
Please refer to page 19 of Online How to Play Instruction Manual for how to "Delete Save Data".

※「データしょうきょ」を行うとつかまえたポケモン、トレーナーレベル、なかよし度などすべてのデータが消えてしまいます。あらかじめご了承ください。

If you delete the data, all data will be deleted, including Pokémon you've caught, your Trainer Level, and Friendship Level. Thank you for your understanding in advance.